

Assembly SMART-LIGHT-PAC [SLP]



1. Folded SLP.



2. First remove the lid.



3. The folded sleeve needs to be lifted and erected.



4. Afterwards you unfold the sleeve completely and push it into the groove of the base. There is no manual handling of the locks required.




5. For better loading of the SLP the flap door can be opened if needed. Therefore, you push the flap door outwards until the velcro fasteners release.



6. For better handling you can attach the opened flap door to the velcro pads outside of the sleeve. It will fit close to the sleeve.



7. After the filling process the flap door is closed and the lid is placed.

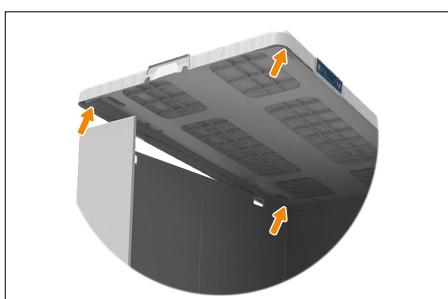

8. The lid includes guidelines for the sleeve, which allow easy placement of the lid. Again, automatic locking of the lid on the sleeve without additional manual handling.



9. Built-up closed SLP.